


# Wiring diagram

Note: Make sure to hook up your setup exactly like this! This is the only correct solution, anything else will not work.

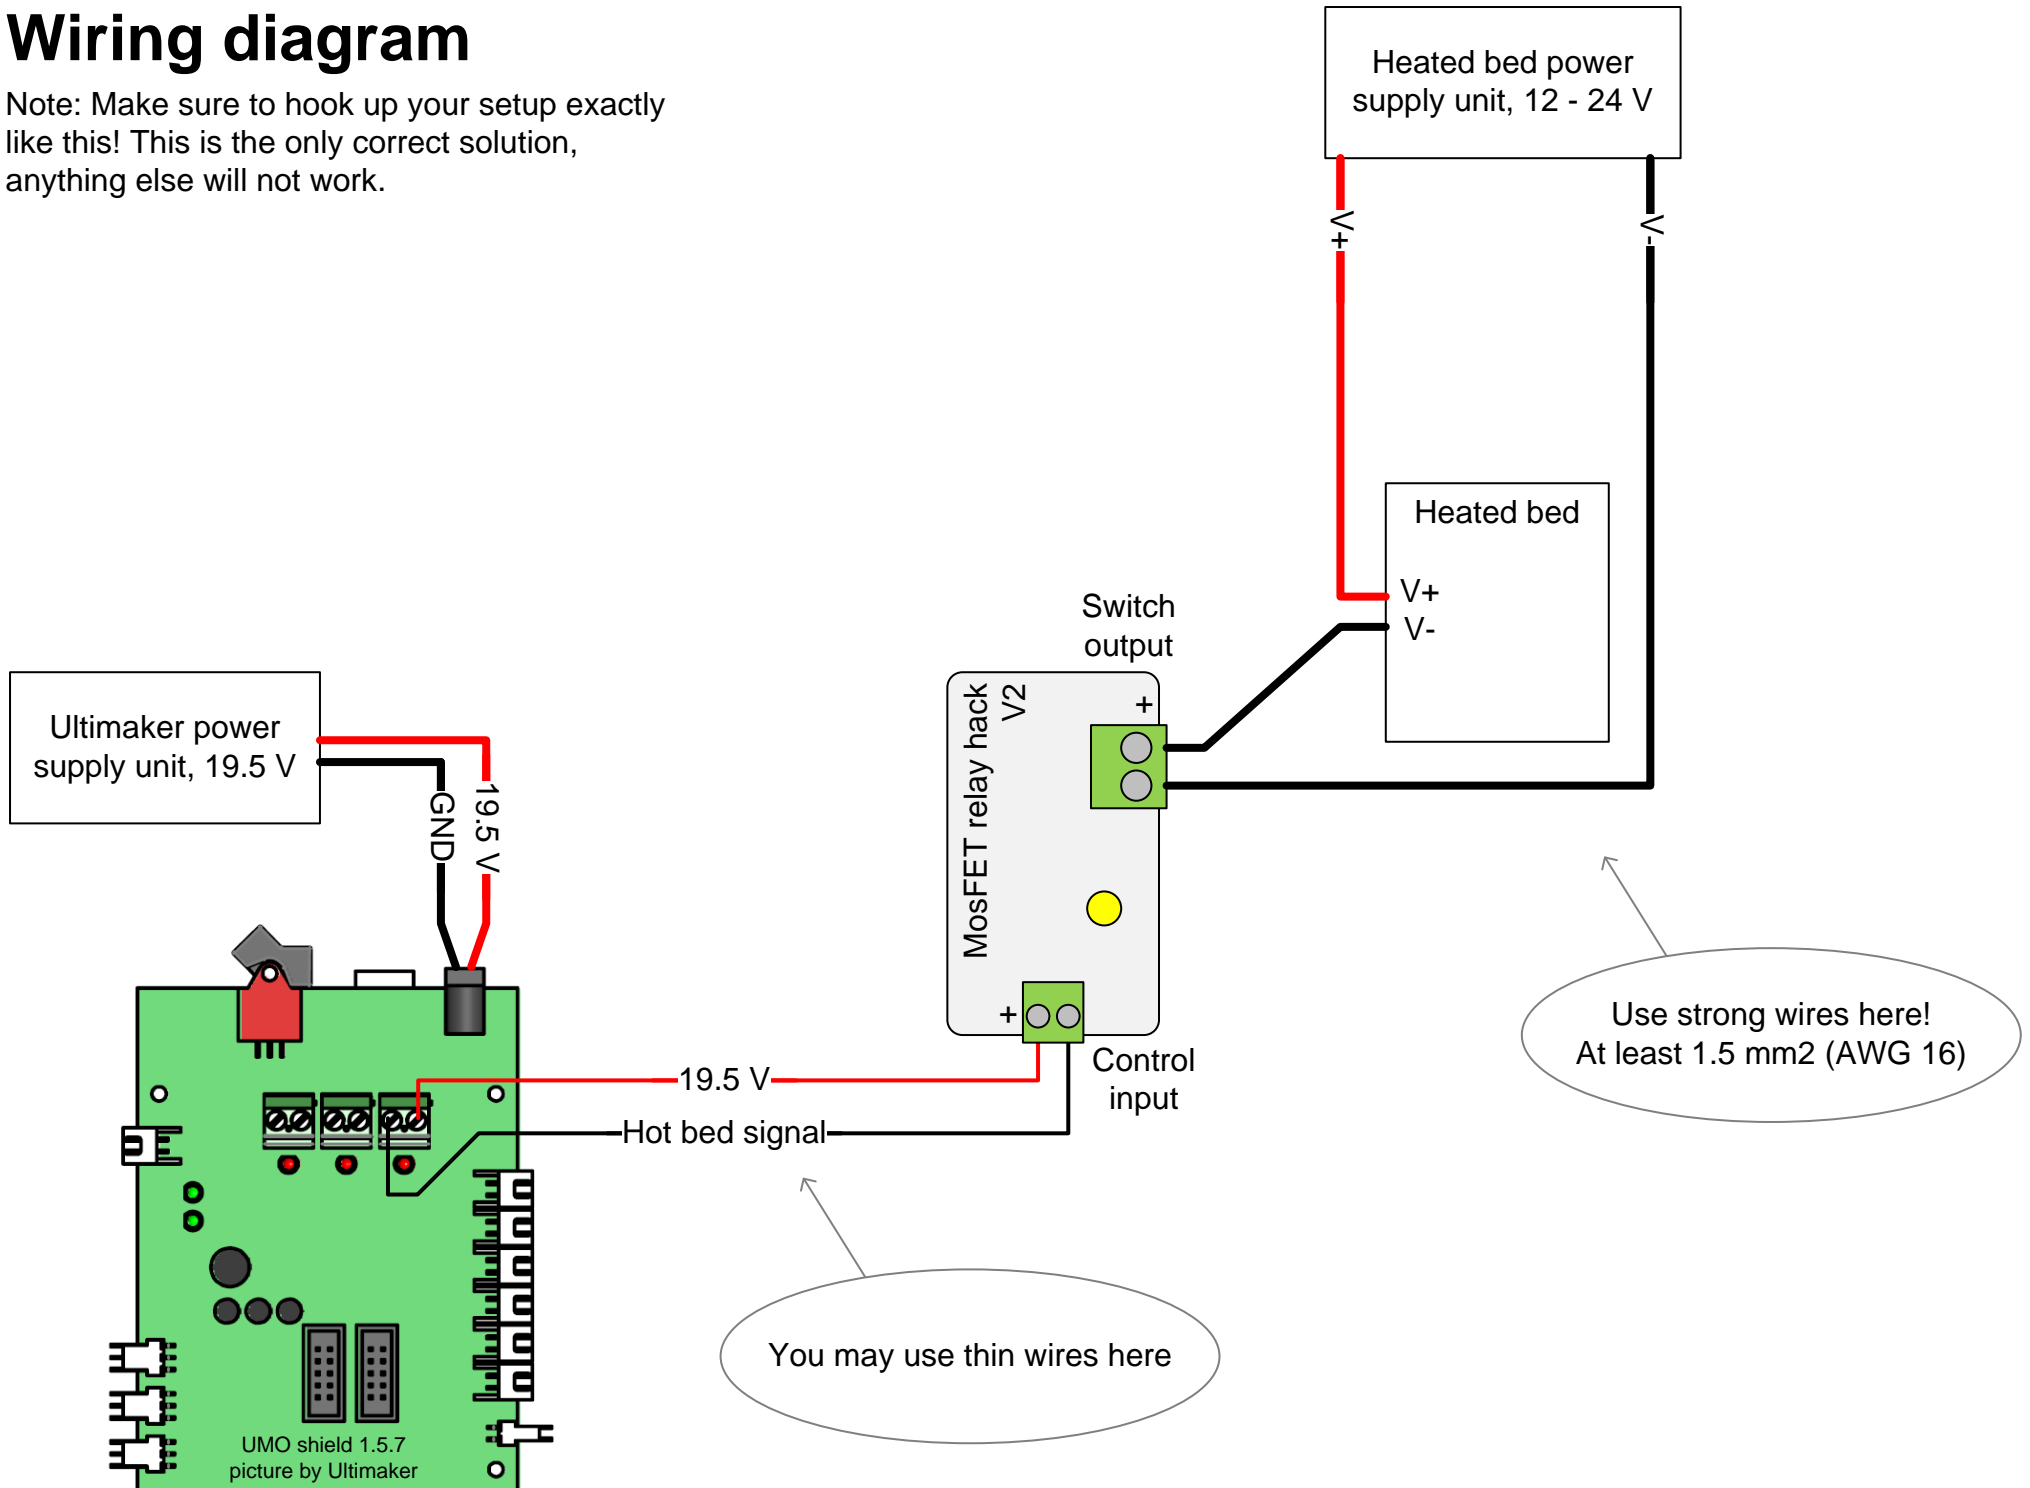

# Important note!

Do not use the dedicated heated bed power supply unit for anything else than the heated bed.

If you connect anything that creates a connection between the Ultimaker's **GND** and the heated bed power supply's **V-**, then the MosFET relay will be bridged and you will damage your electronics.

