


## Massage Cube Assembly Guide

- Prepare two short (7x~8mm) pieces of 1.75mm diameter filament. Cutting the ends with a slight angle will make inserting them easier. These will be used as alignment pins.
- Insert one pin in each hole of one piece.
- Align the two pieces taking note of the correct orientation of the pieces.
- Dry fit by joining together making sure the protruding pins are inserted into the matching holes on the other piece.
- Once satisfied, take apart and apply CA glue to mating surfaces and rejoin. Clamp pieces together until glue is dry.

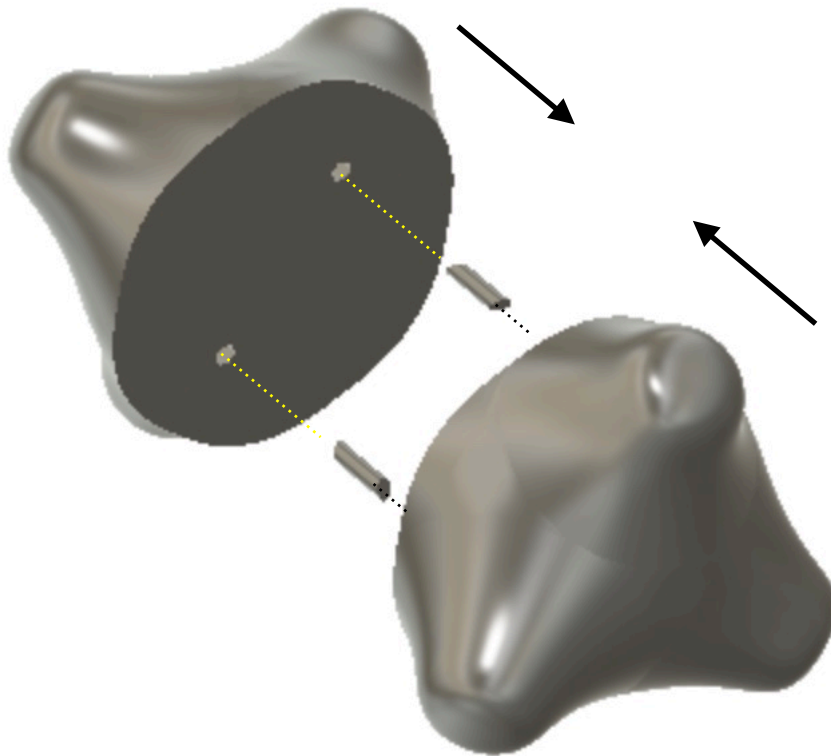

- Optional - Sand smooth apply a few coats of lacquer spray paint.

