


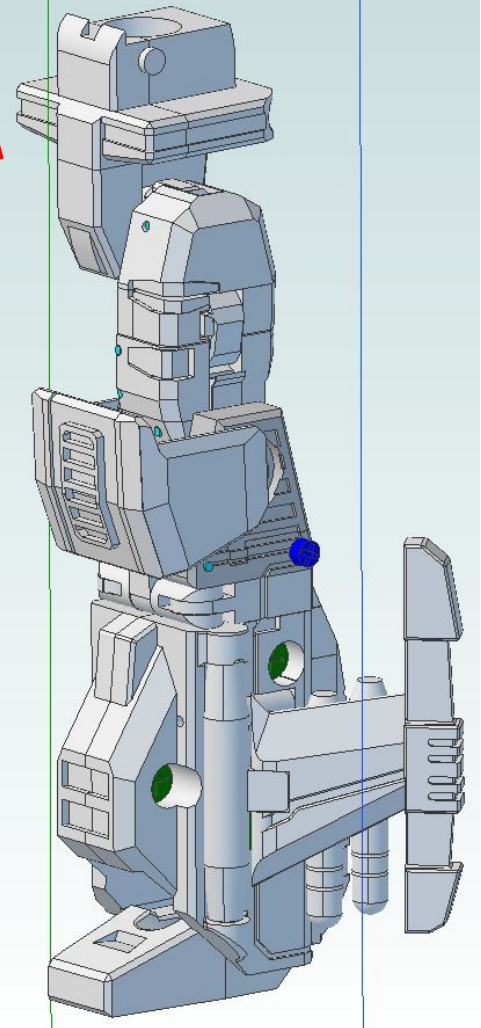
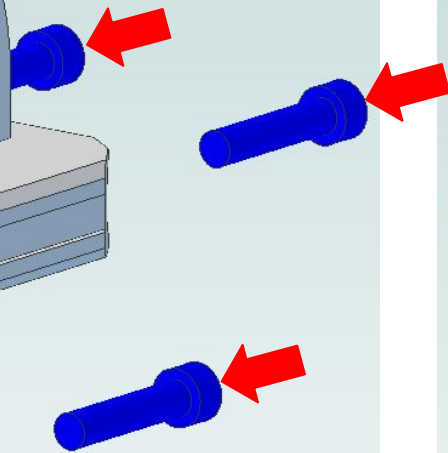
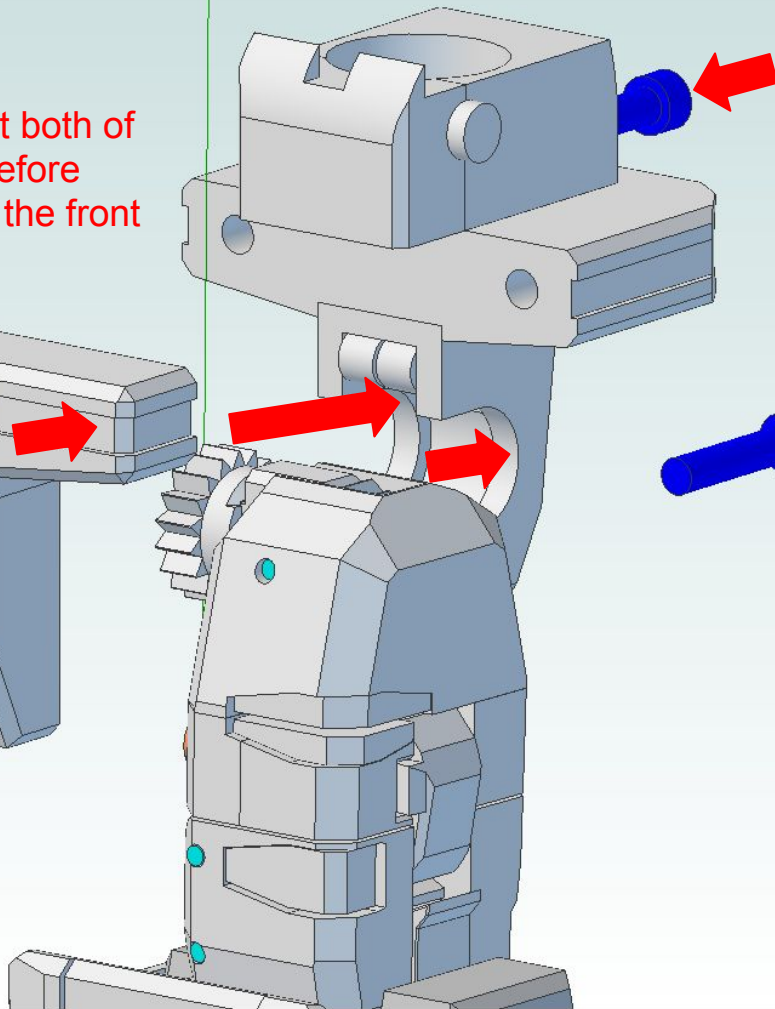
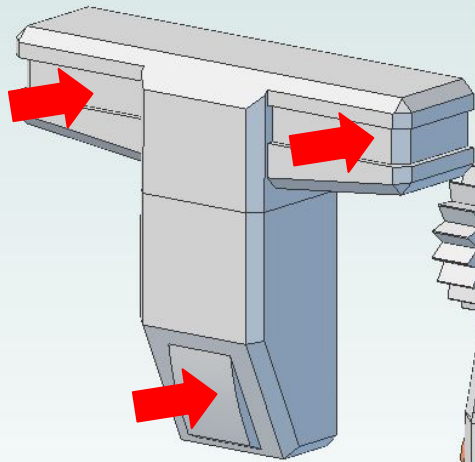


of course put both of  
the legs in before  
screwing on the front

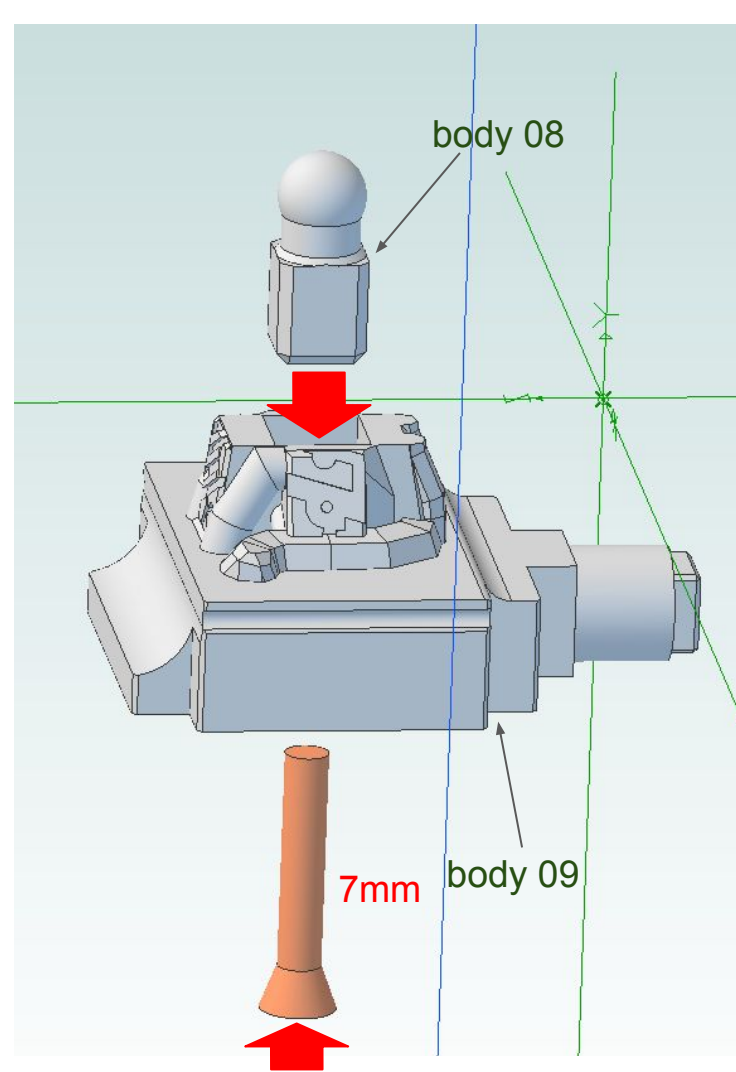

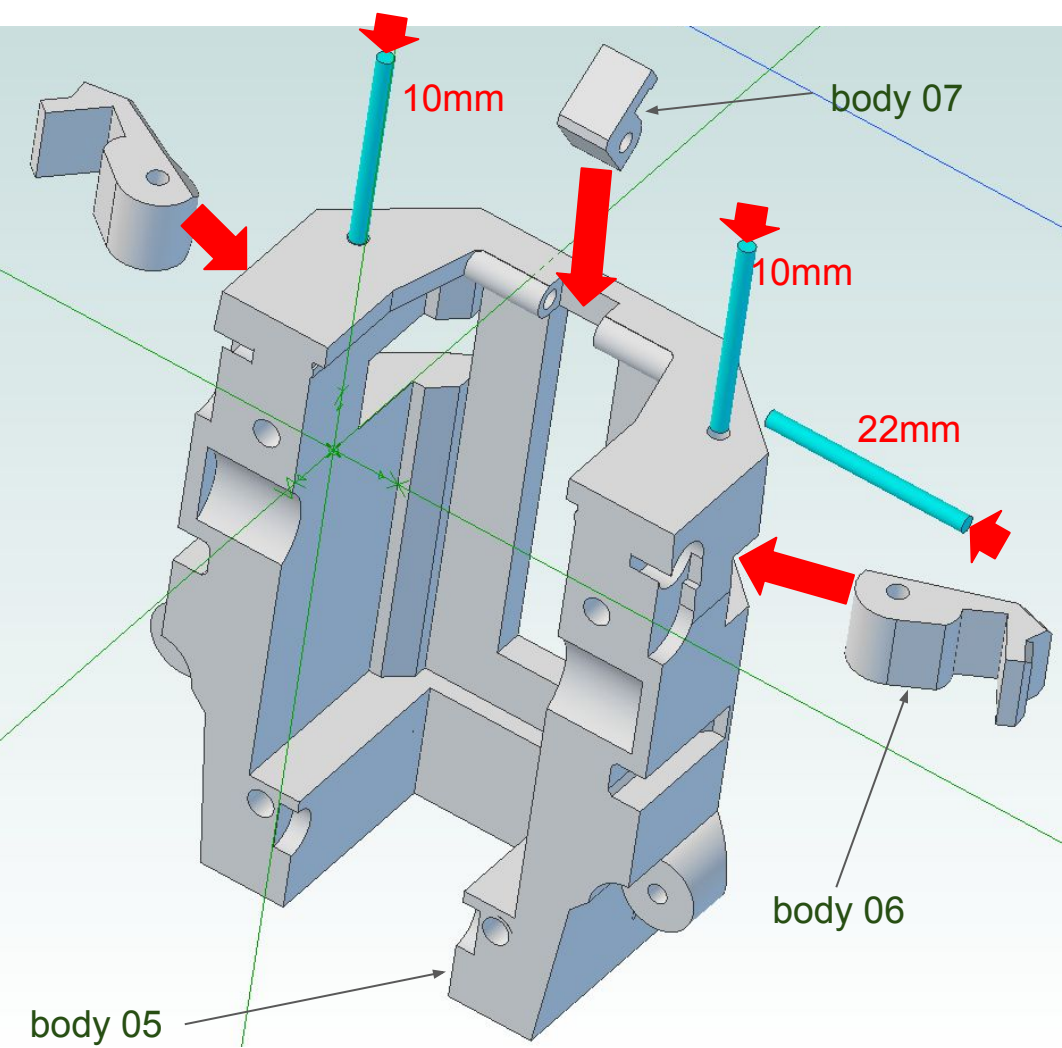

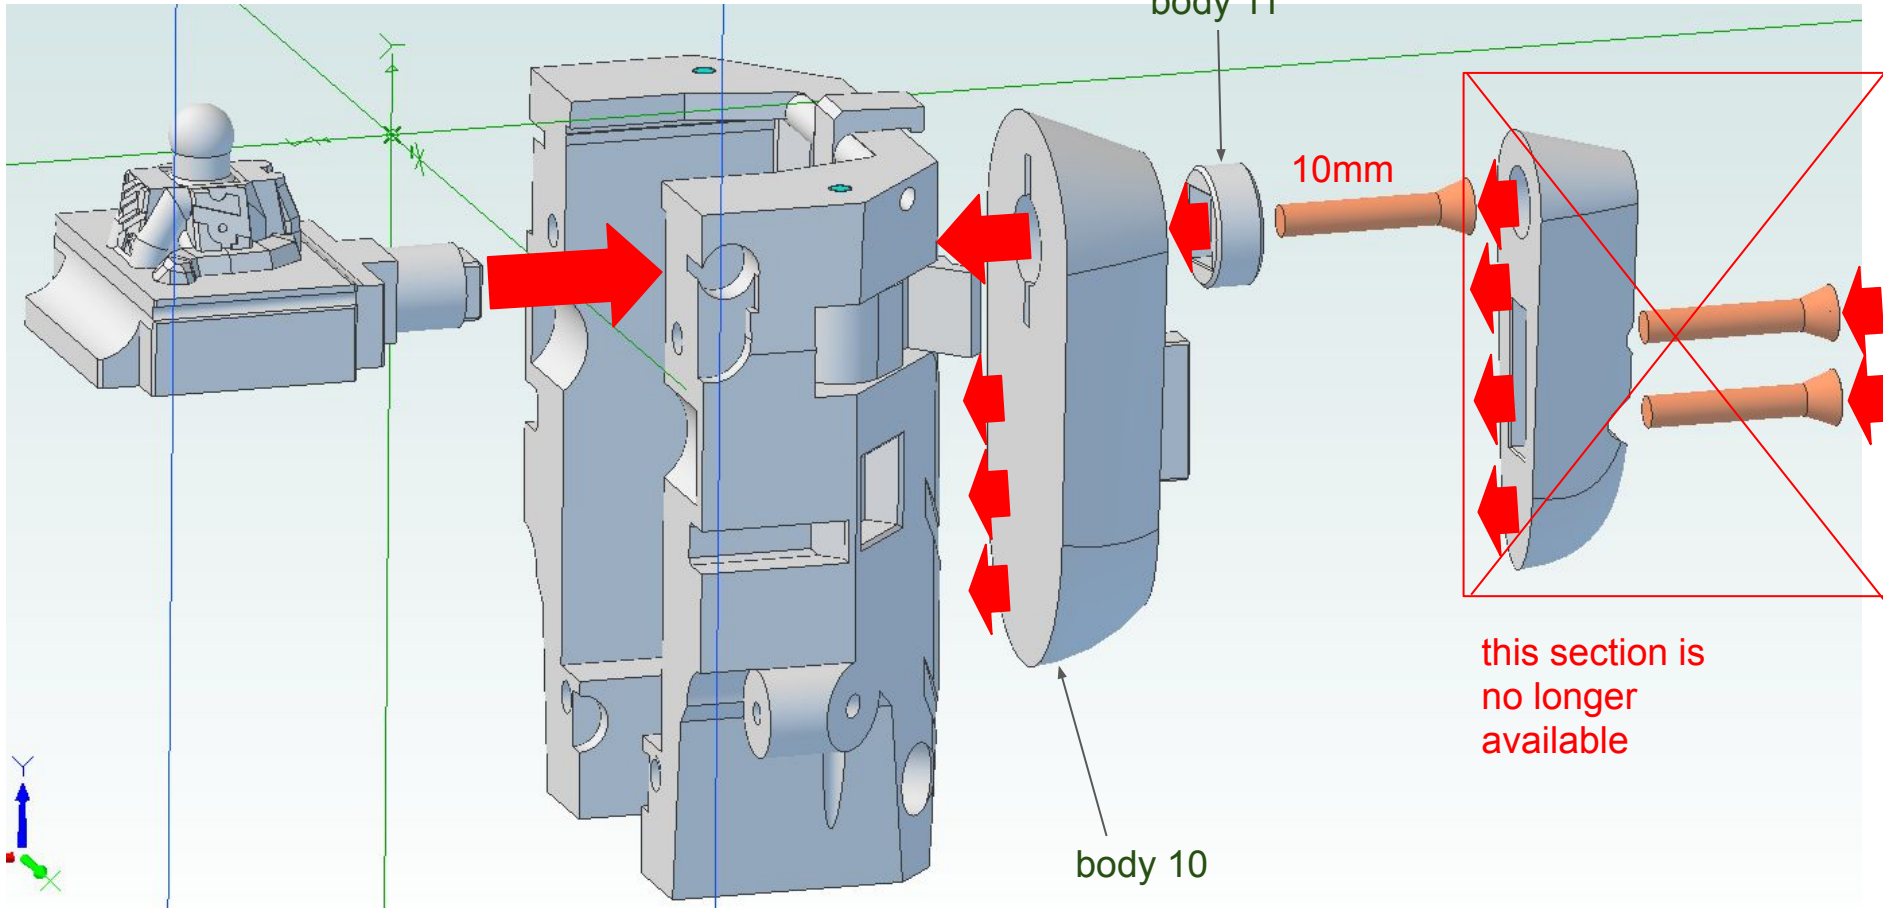

body 11

10mm

body 10

this section is  
no longer  
available

